

Rackview Dual Rail - KVM Rack Drawer

ROSE.COM

INSTALLATION AND OPERATIONS MANUAL



**Rackview 15", 17", 19" Dual Rail LCD
KVM Rack Drawer
1280 x 1024**

Rose Electronics 10707 Stancliff Road
Houston, Texas 77099
Phone (281) 9337673



WWW.ROSE.COM

LIMITED WARRANTY

Rose Electronics warrants the Rackview Product to be in good working order for one year from the date of purchase from Rose Electronics. Should this product fail to be in good working order at any time during this one-year warranty period, Rose Electronics will, at its option, repair or replace the Unit as set forth below. Repair parts and replacement units will be either reconditioned or new. All replaced parts become the property of Rose Electronics. This limited warranty does not include service to repair damage to the Unit resulting from accident, disaster, abuse, or unauthorized modification of the Unit, including static discharge and power surges.

Limited Warranty service may be obtained by delivering this unit during the one-year warranty period to Rose Electronics or an authorized repair center providing a proof of purchase date.

If this Unit is delivered by mail, you agree to insure the Unit or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location, and to use the original shipping container or its equivalent. You must call for a return authorization number first. Under no circumstances will a unit be accepted without a return authorization number. Contact an authorized repair center or Rose Electronics for further information.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPLACEMENT OR REPAIR AS PROVIDED ABOVE. IN NO EVENT WILL ROSE ELECTRONICS BE LIABLE TO YOU FOR ANY DAMAGES INCLUDING ANY LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR THE INABILITY TO USE SUCH PRODUCT, EVEN IF ROSE ELECTRONICS OR AN AUTHORIZED DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

IBM, AT, and PS/2 are trademarks of International Business Machines Corp. Microsoft and Microsoft Windows are registered trademarks of Microsoft Corp. Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owner.

Copyright © Rose Electronics 2013. All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transcribed in any form or any means, electronic or mechanical, including photocopying and recording, without the prior written permission of Rose Electronics.

Table of Contents

Safety Instructions	Page 4
Pre-Installation and Package Contents	Page 5
Layout Diagram and Dimensions	Page 6-7
Installation Procedure	Page 7-9
OSD Function and Front Panel Controls	Page 10-12
Cable Connections	Page 12
Configuring Display Settings	Page 12
Specifications	Page 14
Technical Support	Page 15

Safety Instructions

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 50° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labelled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent it being damaged by transient overvoltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Pre-Installation and Package Contents

Before Installation:

It is very important to mount the equipment in a suitable cabinet or on a stable surface. Make sure the mounting location has good ventilation, is out of direct sunlight, and away from sources of excessive dust, dirt, heat, water, moisture and vibration.

Unpacking:

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact your supplier immediately.

Package Contents:

- 1 x Rackview Unit
- 2 x Mounting bracket and slide rail sets
- 1 x Power Cable
- 1 x User Manual
- 2 x Keys
- 1 x Set of screws and washers
- 1 x set CPU Interface Cables

Pre-Installation:

a) Preparation

- Check all peripherals against the packing list. Make sure that the unit was not damaged during the shipping process. If you encounter any problems, please contact your reseller
- Before installation, make sure all peripherals and computers have been turned off.
- The cabinet depth range must be between 19.84" - 39.37" (504 - 1000mm) for the 15" and 17" models, and between 21.8" - 39.37" (554 - 1000mm) for the 19" model. Contact your reseller for deeper cabinet application.
- Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to power supply connections other than direct connections to the branch circuit.

b) Power On Procedure

- Power on the Rackview (see power switch on back panel)
- Power on the KVM Switch or other connected product
- Power on the CPU


c) Cleaning Your Monitor

To clean your LCD safely, please follow these steps:


- Disconnect the power cord.
- Gently wipe the surface using a clean, dry microfiber cloth. Use as little pressure as possible.

Rackview Layout Diagram & Dimensions


Rackview Dual Rail 15" Model

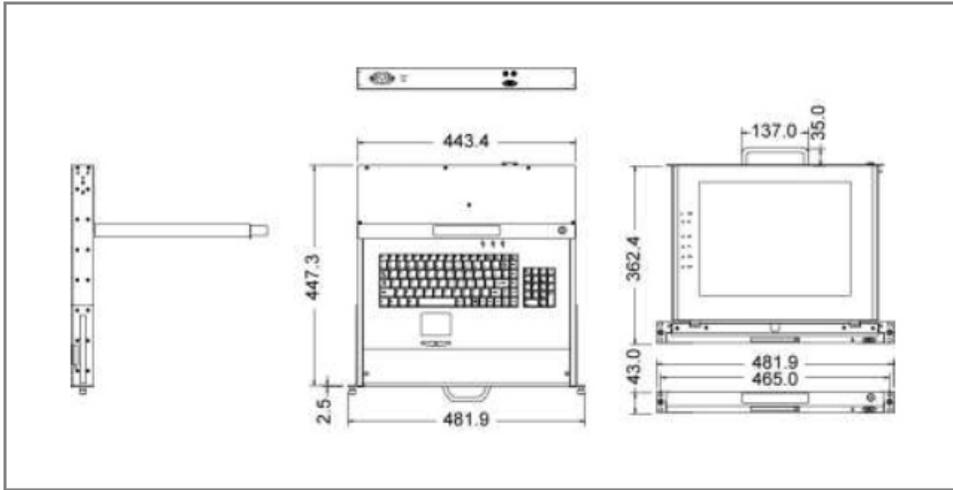

Rackview Dual Rail 17" Model

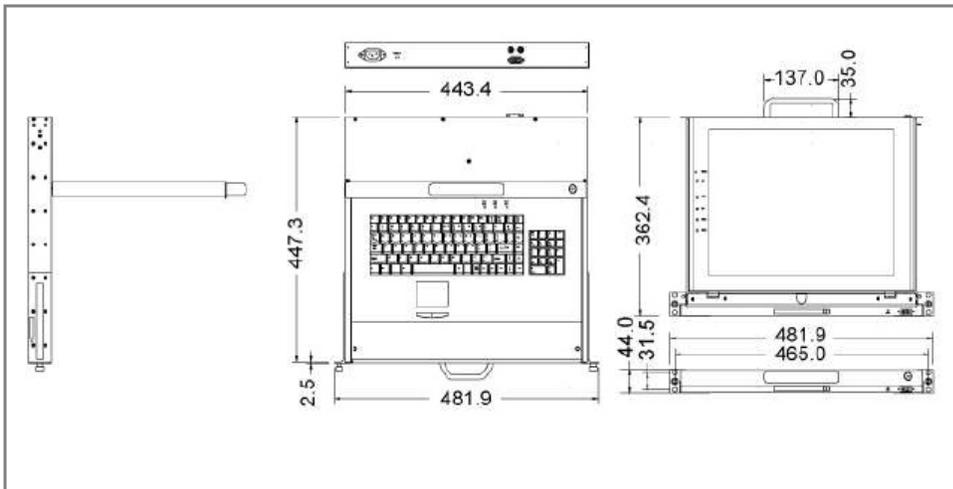

Rackview Dual Rail 19" Model

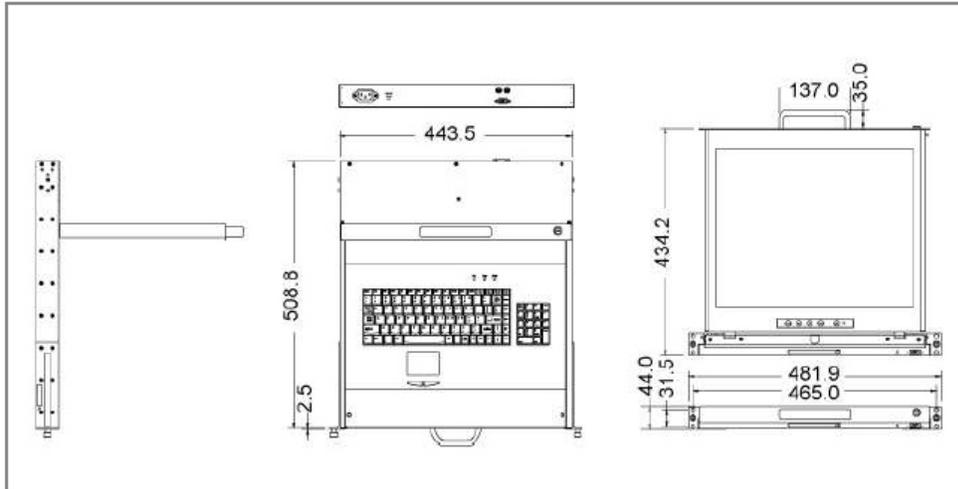


Rackview Product and Packaging Dimensions

Model	Product Dimension (W x D x H) approx	Packing Dimension (W x D x H) approx	Net Weight	Gross Weight
RV1-CDKVT15/DVI	449.8 x 443.4 x 44 mm 17.7 x 17.5 x 1.7 inch	605 x 560 x 202 mm 23.8 x 22.0 x 8.0 inch	10.5 kg 23.1 lbs	15.5 kg 34.2 lbs
RV1-CDKVT17/DVI	449.8 x 443.4 x 44 mm 17.7 x 17.5 x 1.7 inch	605 x 560 x 202 mm 23.8 x 22.0 x 8.0 inch	12.0 kg 26.5 lb	17.0 kg 37.5 lb
RV1-CDKVT19/DVI	511.3 x 443.5 x 44 mm 20.1 x 17.5 x 1.7 inch	664 x 564 x 185 mm 26.1 x 22.2 x 7.3 inch	12.5 kg 27.5 lb	19.0 kg 41.9 lb

Installation Procedure

Hardware Kit Contents

1. Short single bracket, long assembled bracket and support bracket (x 2 of each)

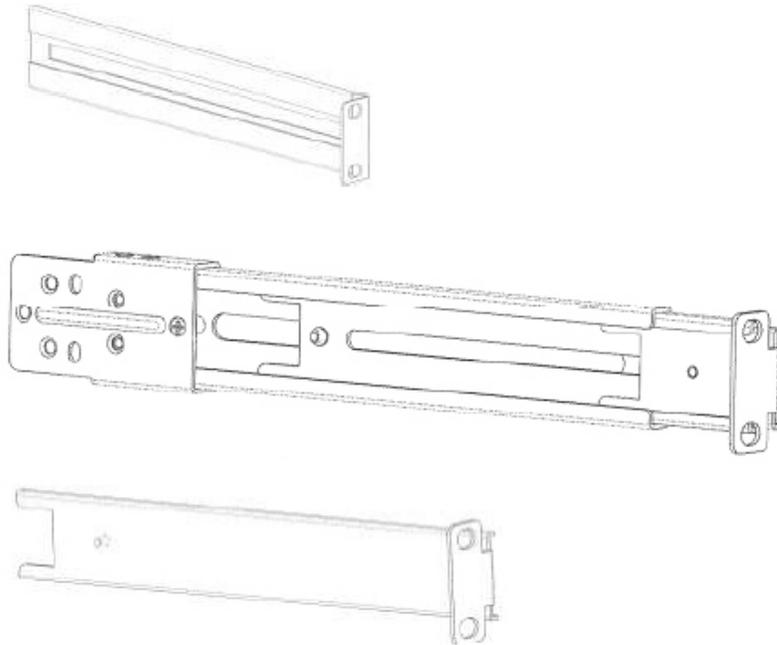


2. Washers, nuts and keys




Installation Procedure

3. For a rack depth of 420-470mm (16.53 – 18.50”), with Rackview 15” and 17”, and for a rack depth of 480-530mm (18.90” – 20.87”) with the Rackview 19”
Release the thumb screw on the front bracket (both sides).


Install the front bracket and fix using cabinet screws.

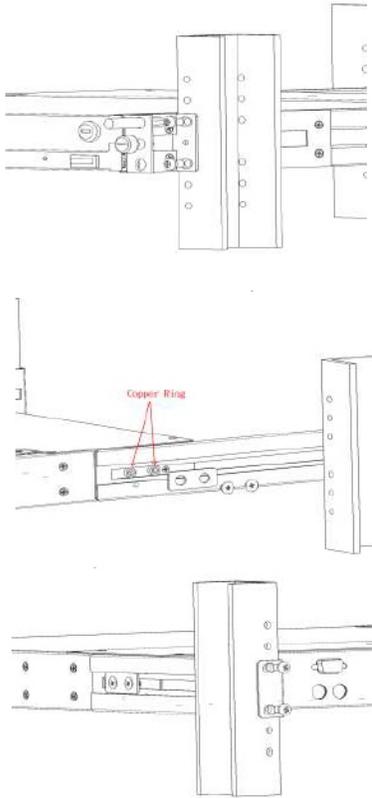

4. For a rack depth above 535mm (21.06") with Rackview 15" and 17", and for a rack depth above 595mm (23.42") with the Rackview 19".
Remove the screws from the long assembled bracket.
Slide the long bracket into the existing rails and fix with 5 cap screws (each side).
Combine (I) and (II) together and fix with 7 cap screws.
Release the thumb screw from the front bracket and install the front bracket using cabinet screws.
Combine (I), (II) and (III) together and install the rear bracket using cabinet screws.

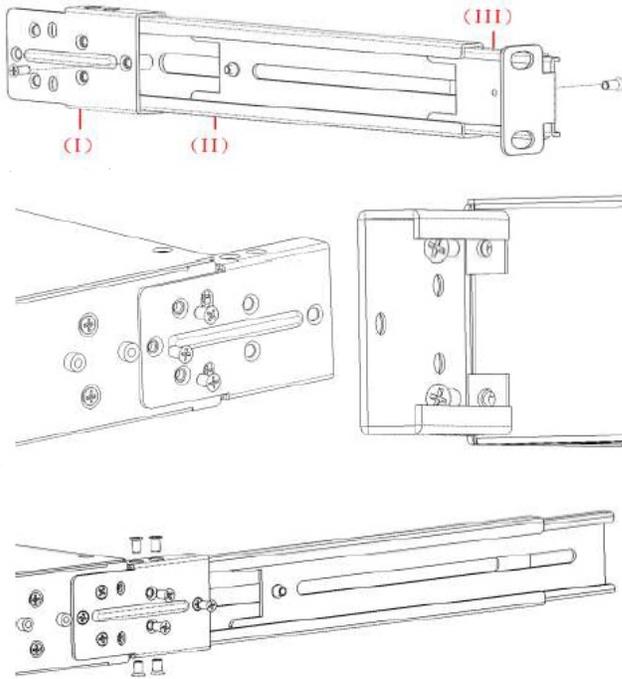

5. When the rack depth is greater than 680mm (26.77") with Rackview 15" and 17", and greater than 745mm (29.33") with the Rackview 19".
 Use the support bracket in place of (III) when the rack depth is greater than the limits shown above.

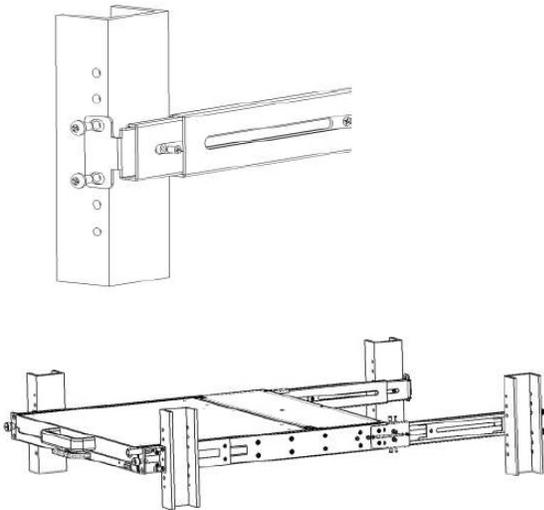

OSD Function and Front Panel Controls

Controls	Description
	Soft power on / off button. Adjacent LED is lit when on.
Auto	Auto-synchronize and scale down display to any valid factory preset timings.
	Press to scroll the function you want to adjust.
	Press to scroll the function you want to adjust.
Menu	To access the main menu. This button also acts as the "Enter" button.

 


Figure 1: OSD Panel Control Buttons for the Rackview 19". On the Rackview 15" and 17" models, the OSD Control Panel is mounted vertically on the left side of the LCD screen.

Navigating the OSD Menu

There are eight different selectable menu items in the OSD.

To operate the OSD, press the "Menu" button

Use the "Down" and "Up" buttons to scroll through the Menu

Once the menu item has been selected, press the "Menu" button again to enter the sub-menu

- Auto tune.
- Input Source
- Brightness
- Contrast
- Color
- Position
- Language
- Recall
- Exit

Auto Tune

Press the "auto tune" button. The panel will adjust the display size automatically and also tune the panel to its best condition.

Input Source

Press the "menu" button to enter and you will see:

VGA / DVI

Use the "Down" and "Up" button to select the input source of signal.

Press the "menu" button to enter

Brightness

Press the "menu" button to enter.

Use the “Down” and “Up” button to adjust the brightness of the display.
Press the “menu” button to enter.

Contrast

Press the “menu” button to enter.
Use the “Down” and “Up” button to adjust the contrast of the display.
Press the “menu” button to enter.

Color

Press the “menu” button to enter, and you will see

Icon	Description
9300°K	To set CIE coordinates at 9300°K color
7500°K	To set CIE coordinates at 7500°K color
6500°K	To set CIE coordinates at 6500°K color
User	To set user defined CIE
Auto color	To auto adjust color
Return	To exit and return to the previous page

Use the “Down” and “Up” button to adjust the color of the display.
Press “menu” to enter.

Position

Press the “menu” button to enter and you will see

Icon	Description
Image Pos	To adjust the position of the image.
OSD Pos	To adjust the position of the OSD.
Return	To exit and return to the previous page

Use the “Down” and “Up” button to scroll.
Press the “menu” button to enter.

Language

Press the “menu” button to enter and you will see:

- English
- German
- French
- Italian
- Spanish

Use the “Down” and “Up” button to scroll.
Press the “menu” button

Recall

Press the “menu” button to enter, and you will see:

Yes/ No

Select “Yes” button then ‘Menu’ button to recall the factory setting.

Select “No” to return to the previous page.

Exit


Press the “exit” button to quit OSD menu.

Power Indicator

- GREEN ON
- RED STANDBY
- RED SUSPEND
- RED OFF

Rear Panel Cable Connections

Depending on which Rackview model you have purchased, the rear panel layout could look like this.

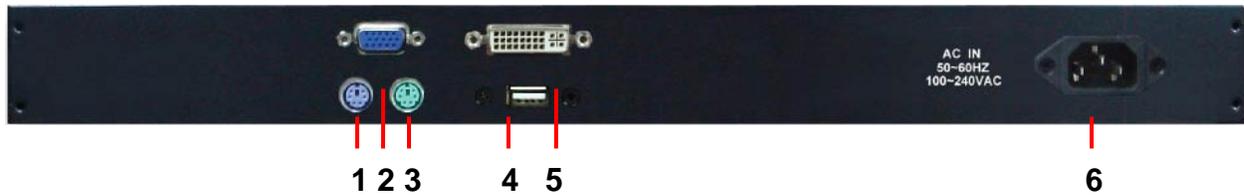

- 1 = PS2 keyboard connector
- 2 = VGA connector
- 3 = PS2 mouse connector
- 4 = USB connector
- 5 = DVI-I connector
- 6 = IEC power socket

Configuring the Display Settings

After connecting the Rackview console and turning on your computer, you may need to configure one or more of the following display settings:

- Display mode (also called desktop area or video resolution)
- Refresh rate (also called vertical scan rate or vertical sync)
- Color depth (also called color palette or number of colors)

Each video card has several controls that let you adjust the display settings. However, the software and driver for each video card is unique. In most cases, you adjust these settings by using a program or utility provided by the manufacturer of the video card.

Most video cards use the Windows Display Properties control panel to configure the display. To open the Windows Display Properties, click the right mouse button in a blank area of the Windows desktop and then select **Properties**. The Settings tab usually lets you change the Color Palette and the Desktop Area (*x by y* pixel resolution).

Some video cards integrate additional features into the Windows Display Properties control panel to give you an exceptional setup that is flexible and easy to use. For example, the control panel may include an Advanced Properties button, an Adjustment tab, or a Refresh tab for changing other settings. Other video cards have a separate utility for setting display properties.

Whenever you change the resolution, color, or refresh rate, the image size, position, or shape may change. This behaviour is normal. You can readjust the image using the panel on-screen controls.

For more information on configuring the display settings, refer to the manual that came with your video card.

You can adjust the horizontal and vertical position, contrast, and brightness to better suit your video card and your personal preference.

Refer to the OSD section of this manual for more information on using the on-screen menu to adjust the video display

Before you begin, make sure that electrical power to all the devices you will be connecting up has been turned off. To prevent damage to your installation due to ground potential difference, make sure that all the devices on the installation are properly grounded. Consult your direct reseller for any technical issues if necessary.

Rackview Dual Rail 15/17/19" - LCD / Keyboard / Mouse Specification

Item	Description
-------------	--------------------

Display Size	15"	17"	19"
Max. Resolution	1024 x 768 (XGA)	1280 x 1024 (SXGA)	1280 x 1024 (SXGA)
Color Support	16M Colors (8-bit)	16.7M Colors (8-bit)	16.7M Colors (8-bit)
Contrast Ratio (typ.)	400:1	450:1	1000:1
Viewing Angle (CR > 10)	R/L 130°, U/D 100°	R/L 170°, U/D 160°	R/L 170°, U/D 160°
Pixel Pitch (mm)	0.297 x 0.297	0.264 x 0.264	0.098 x 0.294
Response Time (ms)	Rise: 5, Decay:11	Rise: 1.2, Decay:3.8	Rise: 1.3, Decay:3.7
Brightness (cd/m ²)	250		
Back Light	Dual lamps for back light		
Keyboard and Mouse	106-key PS2 keyboard with 2-button Touchpad mouse		
Console Port Connectors	1x VGA (HD15) 1x DVI (on request for 15" model) 2x PS2 2x USB 1x Audio line in (optional)		
Power Input	Auto-sensing 100 to 240VAC, 50 / 60Hz		
Power Consumption (Panel)	15" 16W. 17" 13.35W. 19" 13.6W		
Compatibility	Multi-platform - Mix PCs, SUNs, IBMs, HPs & DELLs.		
Operating System	Windows, Linux, Novell, HP-UX, SUN		
Regulation Approval	FCC, CE		

Environmental

Operation	0° to 50°C (32-122°F) Degree
Storage	-20° to 60 °C (-4 - 140° F) Degree
Relative Humidity	Operating: 10~90%, non-condensing
Chassis Construction	Heavy duty steel

Product Codes:

RV1-CDKVT15/DVI	Rackview Dual Rail 15"	KVM Rack Drawer
RV1-CDKVT17/DVI	Rackview Dual Rail 17"	KVM Rack Drawer
RV1-CDKVT19/DVI	Rackview Dual Rail 19"	KVM Rack Drawer

Cables included

CAB-ZXV66MM005	VGA + PS2(MM) cable, 5ft (1.8m)
CAB-USBAB006	USB-AB Cable, 6ft (2.0m)
CAB-DVIDMM006	DVID-MM Cable, 6ft (2.0m)
/DCnn	12/24/48 DC power option

Optional Items: (check with Rose Electronics for pricing and availability)

Audio Option

DC Voltage Option (12/24/48VDC)

Technical Support

If you are experiencing problems, or need assistance in setting up, configuring or operating your product, consult the appropriate sections of this manual. If, however, you require additional information or assistance, please contact the Rose Electronics Technical Support Department at:

Phone: (281) 933-7673
E-Mail: techsupport@rose.com
Web: www.rose.com

Technical Support hours are from: 8:00 am to 6:00 pm CST (USA), Monday through Friday.

Please report any malfunctions in the operation of this Unit or any discrepancies in this manual to the Rose Electronics Technical Support Department.



Copyright © Rose Electronics 2013. All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transcribed in any form or any means, electronic or mechanical, including photocopying and recording, without the prior written permission of Rose Electronics.

Rose Electronics Part # MAN-RV1-CDKVT
Printed In the United States of America – Revision 1.1

WWW.ROSE.COM **sales@rose.com** **(800) 333 9343**

Rose USA (281) 933 7673 Rose Europe +49 (0) 2454 969442 Rose Asia +65 6324 2322 Rose Australia +61 (0) 421 247083

Rose Electronics 10707 Stancliff Road Houston, Texas 77099



© Copyright 2013 Rose Electronics. All rights reserved. Specifications subject to change without notice